
Basin mixer

Installation Instruction


Please read this instruction carefully to avoid any difficulty during installation.

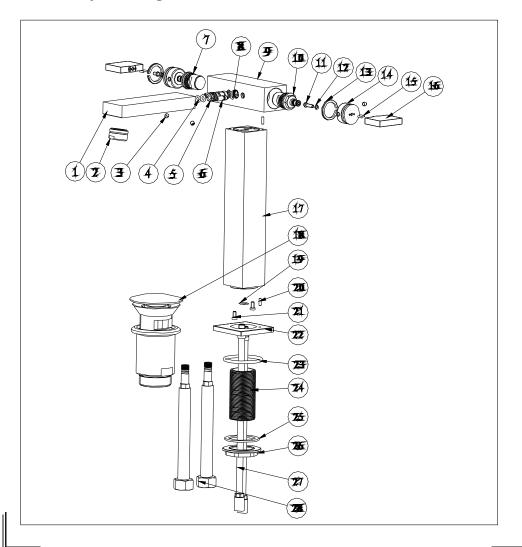


Components List


No.	Component	Quantity
1	Spout	1
2	Aerator	1
3	Fastening screw	4
4	O-ring	2
5	Union	1
6	Fastening screw	2
7	Ceramic head part	1
8	O-ring	2
9	Main body	1
10	Ceramic head part	1
11	Cross-head screw	2
12	Spring shim	2
13	Washer	2
14	Handle seat	2
15	Setting pin	4
16	Handle	2
17	Connecting pipe	1
18	Pop-up waste	1
19	O-ring	3
20	Fixing pin	2
21	Fastening screw	2
22	Seat	1
23	O-ring	1
24	Pipe	1
25	Washer	1
26	Nut	1
27	Inlet pipe	2
28	Flexible connection hose	2

Installation Step

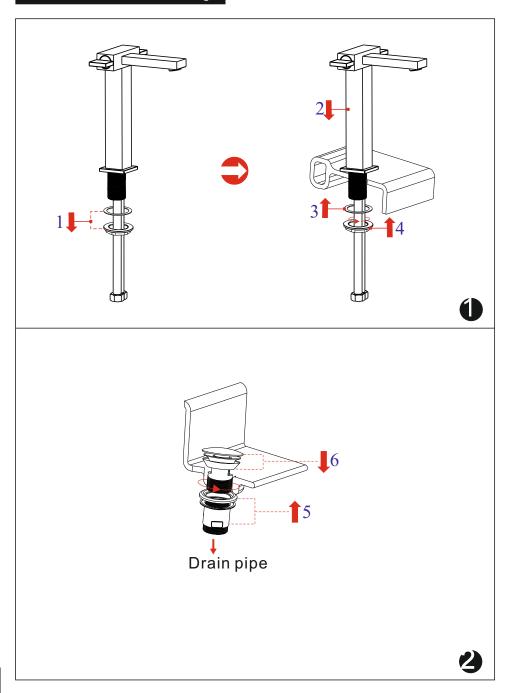

Installation Fig

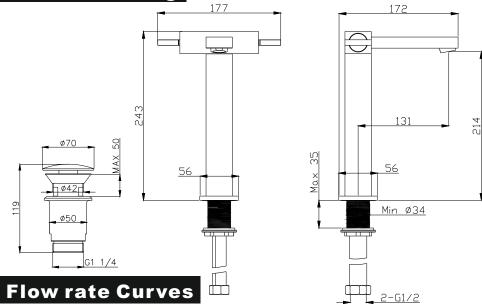

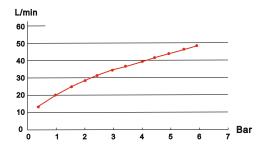

Test pressure: 1.6MPa (16bar)

Flow pressure:

Min 0.05MPa

Max 1.60MPa

Recommended pressure:

0.1MPa to 0.8MPa (1 to 8 bar)

Note

- 1. Ensure to clean the water supply pipe before installing to avoid being jammed.
- 2. The cold-water supply must be connected on the right and the hot-water supply on the left.
- 3. Check the installing dimension according to the Figure and ensure it is installed correctly.
- 4. Hot-water inlet must not be over 80°C.