

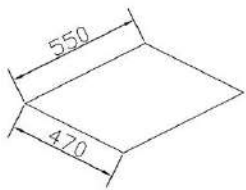


Check all the parts with the following parts list

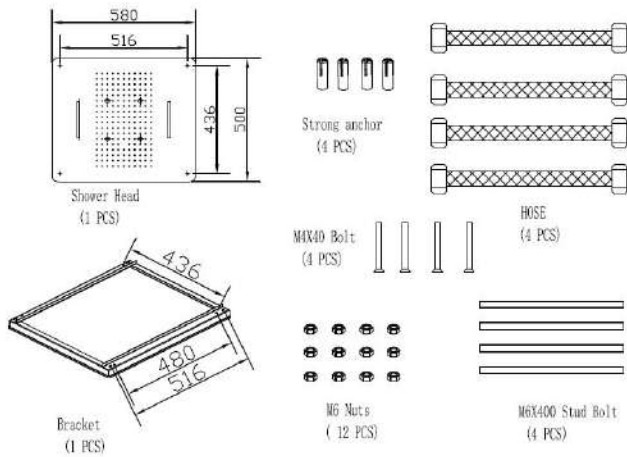

Positions size for Bracket


STEP 1

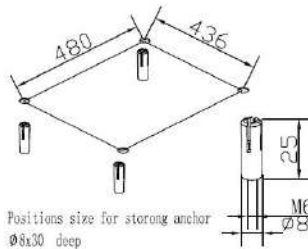

Positions size for strong anchor  
Ø8x30 deep


put the 4 strong anchors into holes and hit them with a hammer

STEP 2

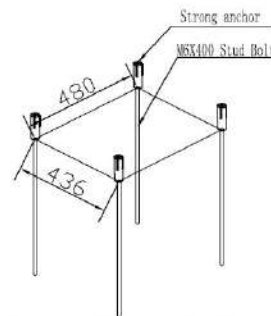


Screw 4 Stud Bolts to the anchor bolts and fasten each bolt with a hex nut

STEP 3

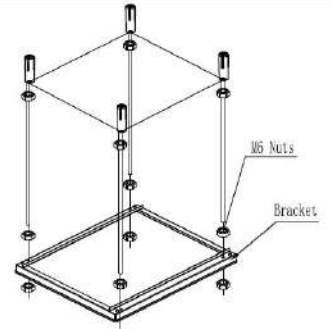


Check the length between the False ceiling and built-in bracket, cut the stud bolts according to the measured value, put one to each stud bolt.

STEP 4

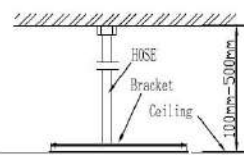


Put the Bracket to the Ceiling

STEP 5

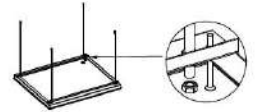


Tighten the stud bolts with 4 nuts and adjust the height.

STEP 6

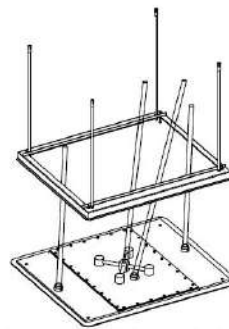

Connect water supply hoses to the Shower Head

STEP 7

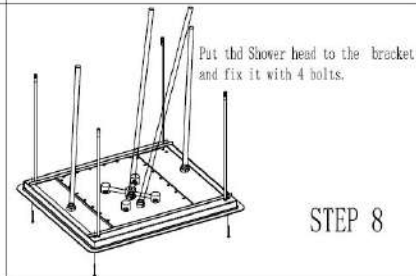

Put the Shower head to the bracket and fix it with 4 bolts.

STEP 8

1. Avoid too much force.
2. The recommended water pressure is min.3 bar.
3. Do not dismantle the products without installations and guide book/call always service engineer.